

Mirasys

PACOM GMS intelligently interfaces with Mirasys products to provide the perfect surveillance and video verification solution for all environments.

| FEATURES | |
|--|---------------------------------------|
| LIVE VIDEO | |
| Stream live video to GMS alarm or event | ✓ |
| PTZ | |
| Move camera using built-in PTZ controls | |
| Pan, Tilt and Zoom using virtual mouse | × |
| Move camera to a preset position | √ · |
| Create a preset camera position | × |
| Modify a preset camera position | × |
| RECORDED VIDEO | |
| Search and play recorded video | √ |
| Pause recorded video | · / |
| Navigate to the first frame of the recorded video | × |
| Navigate to the last frame of the recorded video | × |
| Step forwards one frame at a time | √ · |
| Step backwards one frame at a time | · / |
| Play in fast forward mode | · · · · · · · · · · · · · · · · · · · |
| Play in fast rewind mode | |
| Play previously exported video file | × |
| | |
| EXPORT Save current image change to local PC | |
| Save current image snapshot to local PC Save video clip to local PC | × |
| | ~ |
| AUDIO Character dis franc DVD to CMC (listons in) | |
| Stream audio from DVR to GMS (listen-in) | × |
| Transmit audio from GMS to DVR (microphone) | X |
| GRID DISPLAY | |
| Stream live or recorded video to GMS configurable Grid Display | √ |
| Support for automated grid templates | √ |
| Link grid templates to individual events and alarms | ✓ |
| VIDEO/ALARM MACROS | |
| Show video analytics alarms generated by video device | × |
| Show tamper alarms generated by video device | × |
| Show system fault alarms generated by the video device | × |
| Send commands (Macros) to the video equipment (e.g., change framerate) based on event or alarm | x |
| GENERAL | |
| Able to provide real camera names in the Camera Selection list | √ |
| Play recorded video from the transaction log | \checkmark |

| col | МРА | TTD | | TTV |
|-----|-----|-----|-----|-----|
| CUI | MPA | ΙΙБ | 24- | |

| PRODUCT | VERSION |
|----------------------|---------------|
| PACOM Mirasys Plugin | 1.0 |
| PACOM GMS | 4.20 or later |
| PACOM DVR Framework | 10.4 |
| Mirasys SDK | 7.5.3.130 |